



# Acer Aspire 4743-6481 DVD Drive Replacement

This guide provides detailed instructions on how to remove and replace the DVD Drive from the Acer Aspire 4743-6481.

Written By: Filippo Santoro



## INTRODUCTION

If you are having trouble opening your DVD drive or reading CDs with it, use this guide to replace it with a new one.

---



### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn over the laptop to view the underside.

## Step 2



- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.

## Step 3



- You can lift the battery up and out now.

## Step 4 — DVD Drive



- Remove the 7.0 mm screw, circled in the picture, using a Phillips head screwdriver.

## Step 5



- Once the screw is removed, the DVD drive should easily slide out


## Step 6



- Remove the drive completely.



## Step 7

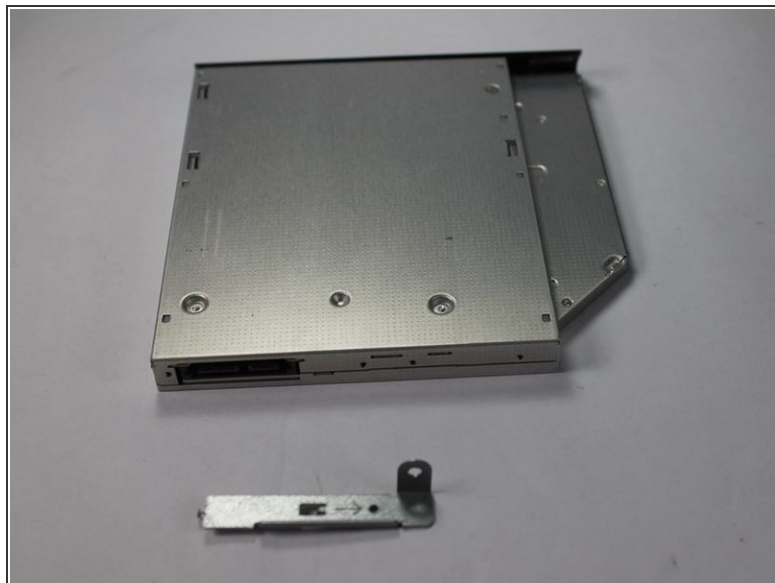

- Face the side of the DVD drive that connects to the laptop and remove the 3mm screw with a Phillips head screwdriver.
- ⓘ Put the screw and the bracket to the side as you may need it for your replacement.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-08 03:13:37 PM.